



HOT DOG MACHINE

The hot dog machine is pretty easy to use. It's best to get it going as soon as you open the Shack to allow it to warm up. Be sure to turn on "motor switch" to get rollers to turn. There are two controls – one for the front section and the other for the back section. You should turn both down once the hot dogs are cooked, but you can also run them independently so that you can put raw hot dogs on the back rollers to keep up with demand.

Hot dogs will take about 20 minutes to cook.

To clean – turn off "temperature dials", but leave "motor switch" on and whip down with a sponge. Once completely clean, turn off "motor switch" and unplug machine. Be sure to clean bottom tray.

